
Rev.2: 2013.02.22 Fg



The HTPA32x31L\_/\_M(LC) is a fully calibrated, low cost thermopile array module, with fully digital SPI interface. The module delivers an electrical offset and ambient temperature compensated output stream, which can be already used for image processing, pattern recognition and presence detection purposes. Object temperatures can be easily obtained by this data stream, a look up table and the calibrated sensitivity constants, which can be found in the EEPROM of the module.


### **Order Code Example**

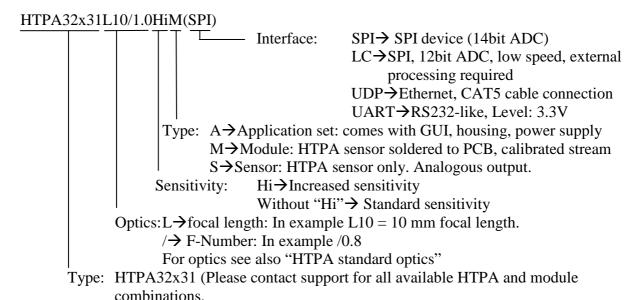

For modules, the recommended type is M(SPI). The advantages are the better ADC resolution, wider input voltage range, wider measurement range.

### **Pinout**

| Pin As | Pin Assignment HTPA32x31M(LC) |                                  |                |  |  |  |  |  |  |  |  |  |  |
|--------|-------------------------------|----------------------------------|----------------|--|--|--|--|--|--|--|--|--|--|
| Pin    | Name                          | Description                      | Type           |  |  |  |  |  |  |  |  |  |  |
| 1      | #MCLR                         | Master clear, negotiated         | Digital Input  |  |  |  |  |  |  |  |  |  |  |
| 2      | VDD                           | Positive supply voltage          | Power          |  |  |  |  |  |  |  |  |  |  |
| 3      | VSS                           | Negative supply voltage          | Power          |  |  |  |  |  |  |  |  |  |  |
| 4      | VSS                           | Negative supply voltage          | Power          |  |  |  |  |  |  |  |  |  |  |
| 5      | #SS                           | Slave select, negotiated         | Digital Input  |  |  |  |  |  |  |  |  |  |  |
| 6      | SDO                           | Serial data out of module        | Digital Output |  |  |  |  |  |  |  |  |  |  |
| 7      | SDI                           | Serial data in of module         | Digital Input  |  |  |  |  |  |  |  |  |  |  |
| 8      | SCK                           | Serial clock                     | Digital Input  |  |  |  |  |  |  |  |  |  |  |
| 9      | MCLK                          | Master clock, drives HTPA sensor | Digital Input  |  |  |  |  |  |  |  |  |  |  |
| 10     | #VD                           | Valid Data, negotiated.          | Digital Output |  |  |  |  |  |  |  |  |  |  |

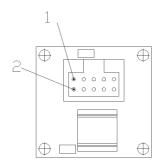

Rev.2: 2013.02.22 Fg



#### **SPI Interface:**

**SCK-Frequency:** 350 kHz ...10 MHz

**Protocol Specifications:** 

Data format:16 data bitsFrame Sync:NoneModule-Selection:SS-Pin

Clock Edge Select: Serial output data changes on transition from idle

to active clock state

SPI Data Input Sample Phase: Data sampled on transition from active to idle

clock state

Clock Polarity: Idle State is high level, active is low level.

**Electrical Specifications:** 


VDD: Supply (+5.0V DC)

SPI Transmit/Receive: TTL VSS GND

**Power Supply:** 5.0 VDC +/- 2%, 300mA

IDD (Idle mode) 20 mA IDD (Operating mode) 45 mA

## HTPA32x31L10/1.0M(LC) Optical Orientation of Pixels:

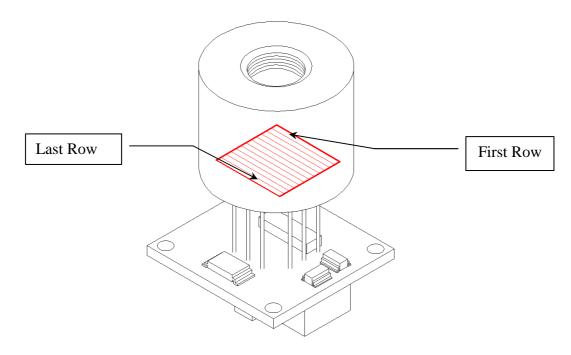


Fax 49 (0) 6123 60 50 39

Rev.2: 2013.02.22 Fg




### **Electrical Connections:**

Single Module:

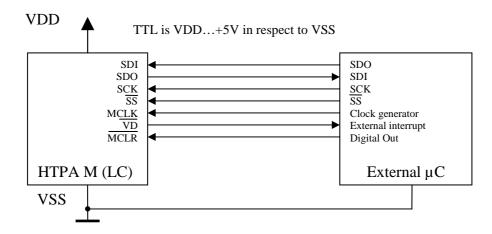

Multiple Modules (preliminary):

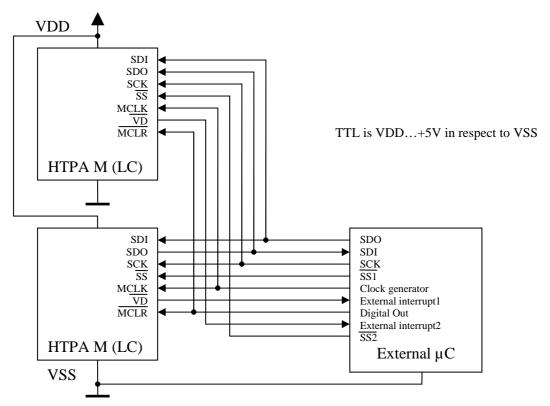


Rev.2: 2013.02.22 Fg



# **Communication and Timings:**

Proposed flow chart of communication. (Master is referred as µC, Slave as HTPA module)

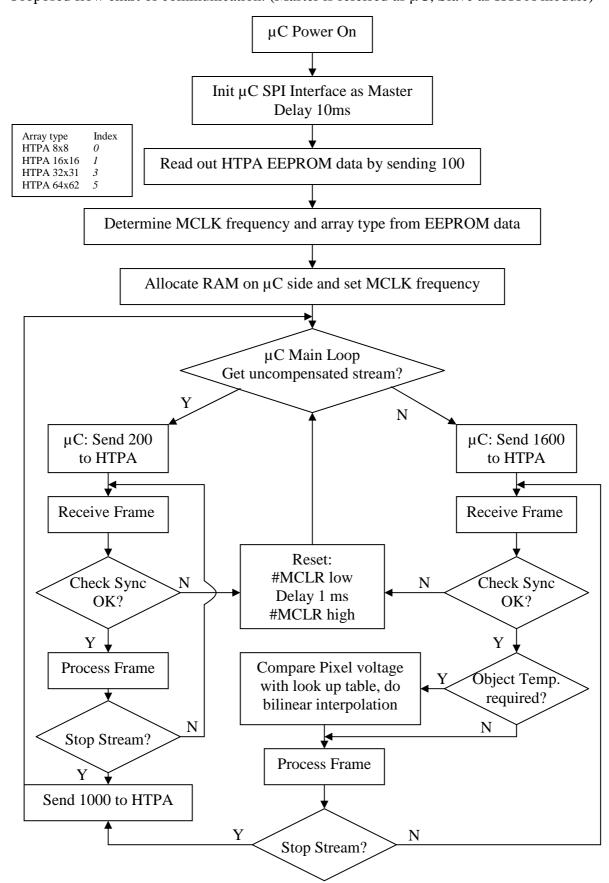


HEIMANN Sensor GmbH Grenzstr. 22 D-01109 Dresden / Germany Contact / Customer Support Phone 49 (0) 6123 60 50 30 Fax 49 (0) 6123 60 50 39 **Internet** 

Rev.2: 2013.02.22 Fg




# **Communication and Timings (continuation):**

#### **Receive of command:**

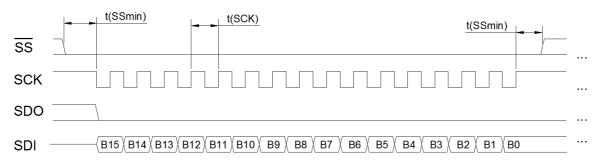


(High state of #SS is not necessary, only for communication with multiple devices)

### **Send of EEPROM content:**

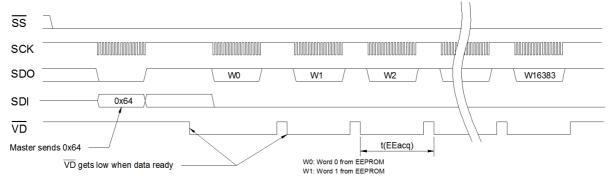


#### Pixel data:

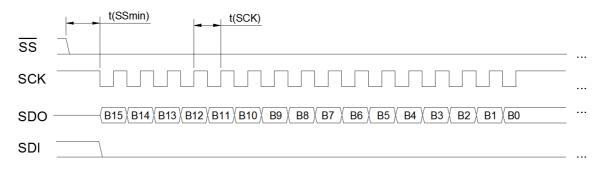

B15...B0: Raw or compensated ADC reading (depending from streaming mode)

#### **Receive of stream command:**

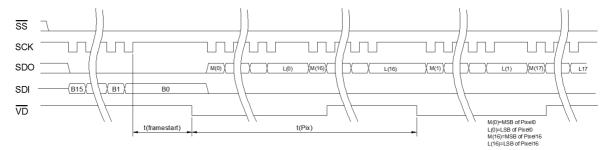

For streaming the adequate frequency needs to be applied to the MCLK pin of the module.

HEIMANN Sensor GmbH Grenzstr. 22 D-01109 Dresden / Germany Contact / Customer Support Phone 49 (0) 6123 60 50 30 Fax 49 (0) 6123 60 50 39 Internet

Rev.2: 2013.02.22 Fg



# **Communication and Timings (continuation):**

Absolute values:

|                        | MIN | NOM | MAX  | Unit | Remarks       |
|------------------------|-----|-----|------|------|---------------|
| MCLR pulse width (low) | 2   |     |      | μs   |               |
| t(SSmin)               | 150 |     |      | ns   |               |
| t(SCK)                 | 0.1 | 1   | 2.86 | μs   |               |
| t(EEacq)               | 185 |     |      | μs   |               |
| t(framestart)          |     | 120 |      | ms   | f(MCLK)=1 MHz |
| t(Pix)                 |     | 200 |      | μs   | f(MCLK)=1 MHz |

t(Pix) and t(framestart) depend on the given MCLK frequency of the master. In example: MCLK frequency is 1003 kHz, then t(Pix) and t(framestart( is calculated via

$$t(Pix) = \frac{200}{f(MCLK)} = \frac{200}{1003000} = 199,4\mu s$$
  $t(framestart) = \frac{t(Pix) \cdot 32 \cdot 33}{2} + 14ms = 119,3ms$ 

#### **Important:**

The SCK frequency needs to be at least that large, that the 32 bits can be submitted within tPix. Therefore, the following condition must be always true:

$$32 \cdot t(SCK) < t(Pix)$$

## **EEPROM Mapping:**

#### Overview:

| Start address | End address | Data type    | Value                               |
|---------------|-------------|--------------|-------------------------------------|
| 0x0           | 0x3         | float        | Minimum value of PixC's for scaling |
| 0x4           | 0x7         | float        | Maximum value of PixC's for scaling |
| 0x8           | 0x9         |              | Heimann Sensor reserved             |
| 0xA           | 0xA         | char         | Table number                        |
| 0xB           | 0x33        |              | Heimann Sensor reserved             |
| 0x34          | 0x37        | float        | PTATgrad                            |
| 0x38          | 0x3B        | float        | PTAToff                             |
| 0x3C          | 0x58        |              | Heimann Sensor reserved             |
| 0x59          | 0x5A        | unsigned int | MCLK Frequency in kHz               |
| 0x5B          | 0x79        |              | Heimann Sensor reserved             |
| 0x80          | 0x83F       | unsigned int | scaled down values of PixC's        |
| 0x840         | 0x3FFF      |              | Heimann Sensor reserved             |

### **Important Note:**

unsigned int: 2 byte; float: 4 byte; char: 1 byte

All the values are stored (if larger than one byte) in little endian, the so called "Intel-Format". Example for the MCLK-Frequency:

$$MCLK_{LB} = \text{EEPROM}[0x59] \ MCLK_{HB} = \text{EEPROM}[0x5A]$$
  
 $MCLK = 256 \cdot MCLK_{HB} + MCLK_{LB}$ 

HEIMANN Sensor GmbH Grenzstr. 22 D-01109 Dresden / Germany Contact / Customer Support Phone 49 (0) 6123 60 50 30 Fax 49 (0) 6123 60 50 39

Rev.2: 2013.02.22 Fg



# **EEPROM Mapping (continuation):**

#### **Details for PixC's:**

| Start address | End address | Data type    | Value                          |
|---------------|-------------|--------------|--------------------------------|
| 0x80          | 0x81        | unsigned int | scaled PixC value of Pixel 0   |
| 0x82          | 0x83        | unsigned int | scaled PixC value of Pixel 16  |
| 0x84          | 0x85        | unsigned int | scaled PixC value of Pixel 1   |
| 0x86          | 0x87        | unsigned int | scaled PixC value of Pixel 17  |
| 0x88          | 0x89        | unsigned int | scaled PixC value of Pixel 2   |
| 0x8A          | 0x8B        | unsigned int | scaled PixC value of Pixel 18  |
|               |             |              |                                |
| 0xBC          | 0xBD        | unsigned int | scaled PixC value of Pixel 15  |
| 0xBE          | 0xBF        | unsigned int | scaled PixC value of Pixel 31  |
| 0xC0          | 0xC1        | unsigned int | scaled PixC value of Pixel 32  |
| 0xC2          | 0xC3        | unsigned int | scaled PixC value of Pixel 48  |
| 0xC4          | 0xC5        | unsigned int | scaled PixC value of Pixel 33  |
| 0xC6          | 0xC7        | unsigned int | scaled PixC value of Pixel 49  |
| •••           |             |              |                                |
| 0x83C         | 0x83D       | unsigned int | scaled PixC value of Pixel 975 |
| 0x83E         | 0x83F       | unsigned int | scaled PixC value of Pixel 991 |

#### Calculation of the PixC's:

- 1. Determine minimum and maximum value of the PixC's out of the EEPROM data by reading associated EEPROM value into a float constant. Pseudocode in C, see function "getPixC(void);"
- 2. Now scale all scaled down PixC's out of the EEPROM content back to their original value and store them in RAM of your system.

### Formulas:

$$PixC_{MAX} = \text{EEPROM}[0x0 - 0x3]$$
 (4 byte float value in little endian)  
 $PixC_{MIN} = \text{EEPROM}[0x4 - 0x7]$  (4 byte float value in little endian)

$$PixC(PixelX) = \frac{\text{EEPROM}[0x80 + (X \cdot 2)] \cdot (PixC_{MAX} - PixC_{MIN})}{65535} + PixC_{MIN}$$

```
unsigned int PixC(992);
                          //The scaled back PixC's. Most likely, this should be global.
void getPixC(void)
                           //this function determines the pixel constants. Precondition: EEPROM content is stored in the char array "EEPROM"
             float common[2],min,max;
             unsigned int addr=0x80,i; //the start address for the scaled pixel constants
                                        //this stores the two bytes from the scaled down PixC out of EEPROM.
             memcpy((char*)&common,(unsigned char*)&EEPROM(0),sizeof(float)*2);
                                                                                              //the address of the scaling values for the pixc's
             min=common[0];
             max=common[1]-
             for(i=0;i<PIXEL;i++){
             memcpy((char*)&pc1,(unsigned char*)&EEPROM(addr),2);
                                                                                 //include string.h for memcpy
             PixC[i]=(unsigned\ int)(((float)pc1/65535.0)*(max-min)+min+0.5);
             return;
}
```

**HEIMANN Sensor GmbH** Grenzstr. 22

D-01109 Dresden / Germany

Contact / Customer Support Phone 49 (0) 6123 60 50 30 Fax 49 (0) 6123 60 50 39 **Internet** 

Rev.2: 2013.02.22 Fg



## Serial order of data in stream:

|         | Compensated Voltage Mode                          |
|---------|---|
| Dataset | Value   |
| 0       | offset corrected Voltage of Pixel0 in in digits   |
| 1       | offset corrected Voltage of Pixel16 in in digits  |
| 2       | offset corrected Voltage of Pixel1 in in digits   |
| 3       | offset corrected Voltage of Pixel17 in in digits  |
|         |   |
| 30      | offset corrected Voltage of Pixel15 in in digits  |
| 31      | offset corrected Voltage of Pixel31 in in digits  |
| 32      | offset corrected Voltage of Pixel32 in in digits  |
| 33      | offset corrected Voltage of Pixel48 in in digits  |
|         |   |
|         | offset corrected Voltage of Pixel991 in in digits |
|         | elOff0 in digits                                  |
|         | elOff16 in digits                                 |
| 994     | elOff1 in digits                                  |
| 995     | elOff17 in digits                                 |
|         |   |
|         | elOff15 in digits                                 |
|         | elOff31 in digits                                 |
|         | Module transmitts 0x789A (use for sync)           |
|         | Module transmitts 0xBCDE (use for sync)           |
|         | least significant 12 bits of TAmb                 |
|         | most significant 4 bits of TAmb                   |
|         | no value, ignore                                  |
| 1029    | no value, ignore                                  |
|         |   |
|         | no value, ignore                                  |
|         | PTAT0 in digits                                   |
|         | no value, ignore                                  |
| 1042    | PTAT1 in digits                                   |
|         |   |
|         | no value, ignore                                  |
|         | PTAT7 in digits                                   |
| 1055    | no value, ignore                                  |

| Raw Voltage Mode<br>Value                 |
|---|
| 1 0.00                                    |
| absolute Voltage of Pixel0 in in digits   |
| absolute Voltage of Pixel16 in in digits  |
| absolute Voltage of Pixel1 in in digits   |
| absolute Voltage of Pixel17 in in digits  |
|   |
| absolute Voltage of Pixel15 in in digits  |
| absolute Voltage of Pixel31 in in digits  |
| absolute Voltage of Pixel32 in in digits  |
| absolute Voltage of Pixel48 in in digits  |
|   |
| absolute Voltage of Pixel991 in in digits |
| elOff0 in digits                          |
| elOff16 in digits                         |
| elOff1 in digits                          |
| elOff17 in digits                         |
| ***                                       |
| elOff15 in digits                         |
| elOff31 in digits                         |
| Module transmitts 0x789A (use for sync)   |
| Module transmitts 0xBCDE (use for sync)   |
| no value, ignore                          |
|   |
| no value, ignore                          |
| PTAT0 in digits                           |
| no value, ignore                          |
| PTAT1 in digits                           |
|   |
| no value, ignore                          |
| PTAT7 in digits                           |
| no value, ignore                          |
|   |

Each dataset consists of a 16 bit value. The 16 bit values are transmitted with LSB first. In case of compensated voltage mode a signed 16 bit value is transmitted, in case of raw voltage mode an unsigned 16 bit value. Signed values are always in 2's complement.

# Pixel Map:

| 0   | 1   | 2   | 3   | 4   | 5   | 6   | 7   | 8   | 9   | 10  | 11  | 12  | 13  | 14  | 15  | 16  | 17  | 18  | 19  | 20  | 21  | 22  | 23  | 24  | 25  | 26  | 27  | 28  | 29    | 30    | 31  |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-------|-------|-----|
| 32  | 33  | 34  | 35  | 36  | 37  | 38  | 39  | 40  | 41  | 42  | 43  | 44  | 45  | 46  | 47  | 48  | 49  | 50  | 51  | 52  | 53  | 54  | 55  | 56  | 57  | 58  | 59  | 60  | 61    | 62    | 63  |
| 64  | 65  | 66  | 67  | 68  | 69  | 70  | 71  | 72  | 73  | 74  | 75  | 76  | 77  | 78  | 79  | 80  | 81  | 82  | 83  | 84  | 85  | 86  | 87  | 88  | 89  | 90  | 91  | 92  | 93    | 94    | 95  |
| 96  | 97  | 98  | 99  | 100 | 101 | 102 | 103 | 104 | 105 | 106 | 107 | 108 | 109 | 110 | 111 | 112 | 113 | 114 | 115 | 116 | 117 | 118 | 119 | 120 | 121 | 122 | 123 | 124 | 125   | 126   | 127 |
| 128 | 129 | 130 | 131 | 132 | 133 | 134 | 135 | 136 | 137 | 138 | 139 | 140 | 141 | 142 | 143 | 144 | 145 | 146 | 147 | 148 | 149 | 150 | 151 | 152 | 153 | 154 | 155 | 156 | 157   | 158   | 159 |
| 160 | 161 | 162 | 163 | 164 | 165 | 166 | 167 | 168 | 169 | 170 | 171 | 172 | 173 | 174 | 175 | 176 | 177 | 178 | 179 | 180 | 181 | 182 | 183 | 184 | 185 | 186 | 187 | 188 | 189   | 190   | 191 |
| 192 | 193 | 194 | 195 | 196 | 197 | 198 | 199 | 200 | 201 | 202 | 203 | 204 | 205 | 206 | 207 | 208 | 209 | 210 | 211 | 212 | 213 | 214 | 215 | 216 | 217 | 218 | 219 | 220 | 221   | 222   | 223 |
| 224 | 225 | 226 | 227 | 228 | 229 | 230 | 231 | 232 | 233 | 234 | 235 | 236 | 237 | 238 | 239 | 240 | 241 | 242 | 243 | 244 | 245 | 246 | 247 | 248 | 249 | 250 | 251 | 252 | 253   | 254   | 255 |
| 256 | 257 | 258 | 259 |     |     |     |     | 264 |     |     |     |     |     |     |     |     |     |     |     |     |     | 278 |     | 280 |     |     | 283 | 284 | 285   | 286   | 287 |
| 288 | 289 | 290 | 291 | 292 | 293 | 294 | 295 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     | 315 | 316 | 317   | 318   | 319 |
| 320 | 321 | 322 |     | 324 |     | 326 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     | 346 |     | 348 | 349   | 350   | 351 |
| 352 | 353 | 354 | 355 | 356 | 357 | 358 | 359 | 360 | 361 | 362 | 363 | 364 | 365 | 366 | 367 | 368 | 369 | 370 | 371 | 372 | 373 | 374 | 375 | 376 | 377 | 378 | 379 | 380 | 381   | 382   | 383 |
| 384 | 385 | 386 | 387 | 388 | 389 | 390 | 391 | 392 | 393 | 394 | 395 | 396 | 397 | 398 | 399 | 400 | 401 | 402 | 403 | 404 | 405 | 406 | 407 | 408 | 409 | 410 | 411 | 412 | 413   | 414   | 415 |
| 416 | 417 | 418 | 419 |     |     |     |     | 424 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     | 440 |     |     | 443 | 444 | 445   | 446   | 447 |
| 448 | 449 | 450 |     |     |     |     |     | 456 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     | 476 |       | 478   | 479 |
|     |     |     | 483 | 484 | 485 | 486 | 487 | 488 | 489 | 490 | 491 | 492 | 493 | 494 | 495 | 496 | 497 | 498 | 499 | 500 | 501 | 502 | 503 | 504 | 505 | 506 | 507 | 508 | 509   | 510   | 511 |
| 512 | 513 | 514 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     | 538 | 539 | 540 | 541   | 542   | 543 |
| 544 | 545 | 546 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     | 573   |       | 575 |
| 576 | 577 | 578 | 579 | 580 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     | 604 | 605   | 606   | 607 |
|     | 609 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     | 635 | 636 |       |       |     |
| 640 | 641 | 642 |     |     |     |     |     | 648 |     |     |     |     |     |     |     |     |     |     |     |     |     | 662 |     |     |     |     |     | 668 | 007   | 670   | 671 |
| 672 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     | 698 | 699 | 700 | 701   |       | 703 |
| 704 | 705 | 706 |     |     |     |     |     | 712 |     |     |     |     |     |     |     |     |     |     |     |     |     | 726 |     | 728 |     |     |     |     | 733   |       | 735 |
| 736 | 737 | 738 | 739 | 740 | 741 | 742 | 743 | 744 | 745 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     | 763 | 764 | 765   | 766   | 767 |
| 768 | 769 | 770 | 771 |     |     |     |     | 776 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     | 792 | 793 | 794 | 795 | 796 | 797   | 798   | 799 |
| 800 | 801 | 802 | 803 | 804 | 805 | 806 | 807 | 808 | 809 |     |     |     |     |     |     |     |     |     |     |     |     | 822 |     | 824 | 0-0 | ì   | 827 | 828 | 829   | 830   | 831 |
| 832 |     | 834 |     |     |     |     |     | 840 |     |     |     |     |     |     |     |     |     |     |     |     |     | 854 |     | 856 | 857 | 858 | 859 | 860 | 861   | 862   | 863 |
|     |     |     | 867 |     |     |     | -   | 872 |     |     |     |     |     |     |     |     |     |     |     |     |     | 886 |     |     |     | 890 |     |     |       |       |     |
|     |     |     |     |     | _   | -   |     | 904 |     |     |     |     |     | _   | _   | _   |     |     |     |     |     |     |     | _   | _   |     | /   | 924 | / = 0 | / - 0 | /   |
| 928 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     | 954 |     |     |       |       |     |
| 960 | 961 | 962 | 963 | 964 | 965 | 966 | 967 | 968 | 969 | 970 | 971 | 972 | 973 | 974 | 975 | 976 | 977 | 978 | 979 | 980 | 981 | 982 | 983 | 984 | 985 | 986 | 987 | 988 | 989   | 990   | 991 |

Rev.2: 2013.02.22 Fg



### **Communication commands:**

| Sent Command | Answer / Result  |
|--------------|--|
| 100          | Output of EEPROM content. Data ready of each 2 bytes is signified by #VD pin.  |
| 200          | Module streams out uncompensated, raw data stream. Data ready of each 4 bytes is signified by #VD pin.               |
| 1000         | Stops streaming mode of module.  |
| 1600         | Module streams offset corrected stream (electrical and thermal). Data ready of each 4 bytes is signified by #VD pin. |

Precondition for all streaming modes:

MCLK signal is generated and frequency is in limits shown by the section "Absolute Maximum Ratings"

Preconditions for compensated streams

MCLK signal is generated and frequency matches EEPROM content. Failure of MCLK should be  $<\pm\,3\%$ 

VDD must be in the given limits (5V + /-2%). False values for these two may affect calculated absolute object temperatures. False values for the MCLK frequency also may result in pattern formation in frame.

# **Absolute Maximum Ratings:**

| Value                                      | MIN     | NOM  | MAX     | Unit | Remarks                              |
|--|---------|------|---------|------|--------------------------------------|
| TTL Frequency on pin MCLK                  | MCLK-3% | MCLK | MCLK+3% | Hz   | in compensated streaming mode        |
| TTL Frequency on pin MCLK                  | 0.1     |      | 1.7     | MHz  | in raw voltage streaming mode        |
| VDD in respect to VSS                      | -0.3    | 5    | 6.5     | V    |                                      |
| VDD in streaming mode                      | 4.9     | 5    | 5.1     | V    | False VDD values affect compensation |
| Voltage on digital pin with respect to VSS | -0.3    |      | VDD+0.3 | V    |                                      |
| Current consumption                        | 37      | 45   | 50      | mΑ   | In streaming                         |
| Current consumption                        | 18      | 20   | 25      | mΑ   | Idle                                 |

Rev.2: 2013.02.22 Fg



# **Temperature Calculation:**

- 1. Init SPI Interface
- 2. Read out EEPROM data
- 3. Determine MCLK frequency, apply to MCLK pin (Refer to EEPROM Mapping)
- 4. Determine pixel constant PixC for each sensitive pixel, keep them in RAM (Refer also to EEPROM mapping)
- 5. Enable ISR connected to the #VD pin of the module
- 6. Write 1600 via the SPI interface to the module
- 7. Module starts to run and signifies valid data with pull down of #VD
- 8. In the ISR get 32 bit (2 times 16 bit read) within the given timings from the module
- 9. These two words represent the compensated pixel voltage of the two corresponding pixels. For serial order of the pixels in frame refer to "Serial order of data in stream"
- 10. Scale the pixel sensitivity according to the following formula, using the PixC's:

$$V_{S}(X) = \frac{1E8 \cdot V_{C}(X)}{PixC(X) \cdot \varepsilon}$$

Where  $\varepsilon$  is the emissivity of the object,  $V_s(X)$  is the sensitivity corrected voltage of pixel X,  $V_c(X)$  is the offset compensated voltage of pixel X (submitted by the module).

- 11. Compare the  $V_s(X)$  value with the pixel voltages in the look up table (vertical axis)
- 12. Calculate the ambient temperature of the sensor out of the given values from the module (see "Serial order of data in stream"). This formula may be used for ambient temperature calculation:

$$T_{AMB} = 4096 \cdot V_C (1027) + V_C (1026)$$

- 13. Compare the  $T_{AMB}$  value with the horizontal axis of the look up table.
- 14. Do a bilinear interpolation of the 4 neighbour supporting points, where  $T_{AMB}$  and  $V_{s}(X)$  intersect.
- 15. The result is the object temperature in deci-Kelvin [dK].

C-Code for all these calculations can be found in our SDK (Software Development Kit). Furthermore, the SDK is able to fetch the data from the module and sends it to our GUI (Graphical User Interface) which can visualize the data, records videos and text files and has many additional features. For more information see <a href="https://www.heimannsensor.com">www.heimannsensor.com</a>.

Internet

Rev.2: 2013.02.22 Fg



# Look up table:

|                    | Ambient 7    | emperatu     | ıre [dK]     |                      |                      |                      |                      |
|--------------------|--------------|--------------|--------------|----------------------|----------------------|----------------------|----------------------|
| Pixel voltage[dig] | 2582         | 2732         | 2882         | 3032                 | 3182                 | 3332                 | 3482                 |
| -384               | 0x000        | 0x000        | 1804         | 2285                 | 2606                 | 2867                 | 3097                 |
| -320               | 0x000        | 1589         | 2134         | 2467                 | 2732                 | 2962                 | 3172                 |
| -256<br>-192       | 1455<br>1965 | 2021<br>2273 | 2353<br>2521 | 2614<br>2739         | 2841<br>2939         | 3048<br>3127         | 3242<br>3307         |
| -128               | 2235         | 2458         | 2659         | 2848                 | 3027                 | 3200                 | 3369                 |
| -64                | 2428         | 2606         | 2778         | 2944                 | 3108                 | 3268                 | 3427                 |
| 0                  | 2582         | 2732         | 2882         | 3032                 | 3182                 | 3332                 | 3482                 |
| 64<br>128          | 2711<br>2823 | 2842<br>2939 | 2975<br>3060 | 3112<br>3186         | 3251<br>3316         | 3392<br>3449         | 3534<br>3584         |
| 192                | 2922         | 3027         | 3138         | 3255                 | 3377                 | 3503                 | 3632                 |
| 256                | 3012         | 3108         | 3210         | 3320                 | 3435                 | 3554                 | 3678                 |
| 320                | 3094         | 3182         | 3278         | 3381                 | 3489                 | 3604                 | 3723                 |
| 384<br>448         | 3169<br>3239 | 3251<br>3316 | 3341<br>3401 | 3438<br>3493         | 3541<br>3591         | 3651<br>3696         | 3765<br>3806         |
| 512                | 3305         | 3377         | 3457         | 3544                 | 3639                 | 3740                 | 3846                 |
| 576                | 3367         | 3435         | 3511         | 3594                 | 3685                 | 3782                 | 3884                 |
| 640                | 3425         | 3489         | 3562         | 3642                 | 3729                 | 3822                 | 3922                 |
| 704<br>768         | 3480         | 3541         | 3611         | 3687                 | 3771                 | 3861<br>3899         | 3958<br>3993         |
| 832                | 3532<br>3583 | 3591<br>3639 | 3657<br>3702 | 3731<br>3773         | 3812<br>3851         | 3936                 | 4027                 |
| 896                | 3631         | 3685         | 3746         | 3814                 | 3890                 | 3972                 | 4061                 |
| 960                | 3677         | 3729         | 3788         | 3854                 | 3927                 | 4007                 | 4093                 |
| 1024               | 3721<br>3764 | 3771         | 3828         | 3892<br>3929         | 3963<br>3998         | 4040                 | 4125<br>4155         |
| 1088<br>1152       | 3805         | 3812<br>3851 | 3867<br>3905 | 3929                 | 4032                 | 4073<br>4105         | 4186                 |
| 1216               | 3844         | 3890         | 3941         | 4000                 | 4065                 | 4137                 | 4215                 |
| 1280               | 3883         | 3927         | 3977         | 4034                 | 4097                 | 4167                 | 4244                 |
| 1344               | 3920         | 3963         | 4012         | 4067                 | 4129                 | 4197                 | 4272                 |
| 1408<br>1472       | 3957<br>3992 | 3998<br>4032 | 4045<br>4078 | 4099<br>4131         | 4160<br>4190         | 4226<br>4255         | 4300<br>4327         |
| 1536               | 4026         | 4065         | 4110         | 4161                 | 4219                 | 4283                 | 4353                 |
| 1600               | 4059         | 4097         | 4141         | 4191                 | 4248                 | 4310                 | 4379                 |
| 1664               | 4092         | 4129         | 4172         | 4221                 | 4276                 | 4337                 | 4405                 |
| 1728<br>1792       | 4123<br>4154 | 4160<br>4190 | 4202<br>4231 | 4249<br>4278         | 4303<br>4330         | 4364<br>4390         | 4430<br>4455         |
| 1856               | 4184         | 4219         | 4259         | 4305                 | 4357                 | 4415                 | 4479                 |
| 1920               | 4214         | 4248         | 4287         | 4332                 | 4383                 | 4440                 | 4503                 |
| 1984               | 4243         | 4276         | 4314         | 4359                 | 4408                 | 4464                 | 4526                 |
| 2048               | 4271         | 4304         | 4341         | 4384                 | 4433                 | 4488                 | 4549                 |
| 2112<br>2176       | 4299<br>4326 | 4331<br>4357 | 4367<br>4393 | 4410<br>4435         | 4458<br>4482         | 4512<br>4535         | 4572<br>4594         |
| 2240               | 4352         | 4383         | 4419         | 4459                 | 4506                 | 4558                 | 4616                 |
| 2304               | 4378         | 4408         | 4443         | 4484                 | 4529                 | 4581                 | 4638                 |
| 2368               | 4404         | 4433         | 4468         | 4507                 | 4552                 | 4603                 | 4659                 |
| 2432<br>2496       | 4429<br>4454 | 4458<br>4482 | 4492<br>4515 | 4531<br>4554         | 4575<br>4597         | 4625<br>4646         | 4680<br>4701         |
| 2560               | 4478         | 4506         | 4539         | 4576                 | 4619                 | 4667                 | 4721                 |
| 2624               | 4502         | 4529         | 4561         | 4598                 | 4641                 | 4688                 | 4741                 |
| 2688               | 4525         | 4552         | 4584         | 4620                 | 4662                 | 4709                 | 4761                 |
| 2752               | 4548         | 4575<br>4597 | 4606<br>4628 | 4642                 | 4683                 | 4729                 | 4781                 |
| 2816<br>2880       | 4571<br>4593 | 4619         | 4649         | 4663<br>4684         | 4703<br>4724         | 4749<br>4769         | 4800<br>4819         |
| 2944               | 4615         | 4641         | 4670         | 4705                 | 4744                 | 4788                 | 4838                 |
| 3008               | 4637         | 4662         | 4691         | 4725                 | 4764                 | 4808                 | 4857                 |
| 3072               | 4658         | 4683         | 4712         | 4745                 | 4783<br>4803         | 4827<br>4845         | 4875<br>4893         |
| 3136<br>3200       | 4679<br>4700 | 4703<br>4724 | 4732<br>4752 | 4765<br>4785         | 4803                 | 4845<br>4864         | 4893                 |
| 3264               | 4720         | 4744         | 4772         | 4804                 | 4841                 | 4882                 | 4929                 |
| 3328               | 4740         | 4764         | 4791         | 4823                 | 4859                 | 4900                 | 4947                 |
| 3392               | 4760         | 4783         | 4810         | 4842                 | 4878                 | 4918                 | 4964                 |
| 3456<br>3520       | 4780<br>4799 | 4803<br>4822 | 4829<br>4848 | 4860<br>4879         | 4896<br>4914         | 4936<br>4953         | 4981<br>4998         |
| 3584               | 4818         | 4841         | 4867         | 4897                 | 4931                 | 4971                 | 5015                 |
| 3648               | 4837         | 4859         | 4885         | 4915                 | 4949                 | 4988                 | 5032                 |
| 3712               | 4856         | 4878         | 4903         | 4932                 | 4966                 | 5005                 | 5048                 |
| 3776<br>3840       | 4874<br>4893 | 4896<br>4914 | 4921<br>4938 | 4950<br>4967         | 4983<br>5000         | 5021<br>5038         | 5064<br>5080         |
| 3904               | 4911         | 4931         | 4956         | 4984                 | 5017                 | 5054                 | 5096                 |
| 3968               | 4928         | 4949         | 4973         | 5001                 | 5034                 | 5071                 | 5112                 |
| 4032               | 4946         | 4966         | 4990         | 5018                 | 5050                 | 5087                 | 5128                 |
| 4096               | 4963         | 4983         | 5007         | 5035                 | 5066                 | 5103                 | 5143                 |
| 4160<br>4224       | 4980<br>4997 | 5000<br>5017 | 5024<br>5040 | 5051<br>5067         | 5083<br>5098         | 5118<br>5134         | 5159<br>5174         |
| 4288               | 5014         | 5034         | 5057         | 5084                 | 5114                 | 5149                 | 5189                 |
| 4352               | 5031         | 5050         | 5073         | 5099                 | 5130                 | 5165                 | 5204                 |
| 4416               | 50.47        | 5066         | 5089         | 5115                 | 5145                 | 5180                 | 5219                 |
|                    | 5047         |              |              |                      |                      |                      |                      |
| 4480               | 5064         | 5083         | 5105         | 5131                 | 5161                 | 5195<br>5210         | 5233                 |
|                    |              |              |              | 5131<br>5146<br>5162 | 5161<br>5176<br>5191 | 5195<br>5210<br>5224 | 5233<br>5248<br>5262 |

Object and Ambient temperatures in deci-Kelvin [dK]. Pixel voltage in digits [dig]. Insert sensitivity (and emissivity) corrected voltage.


### **Table Number #12**

You can find the matching table number to your device in the EEPROM, refer to "EEPROM Mapping"

Rev.2: 2013.02.22 Fg



## **Dimensions:**

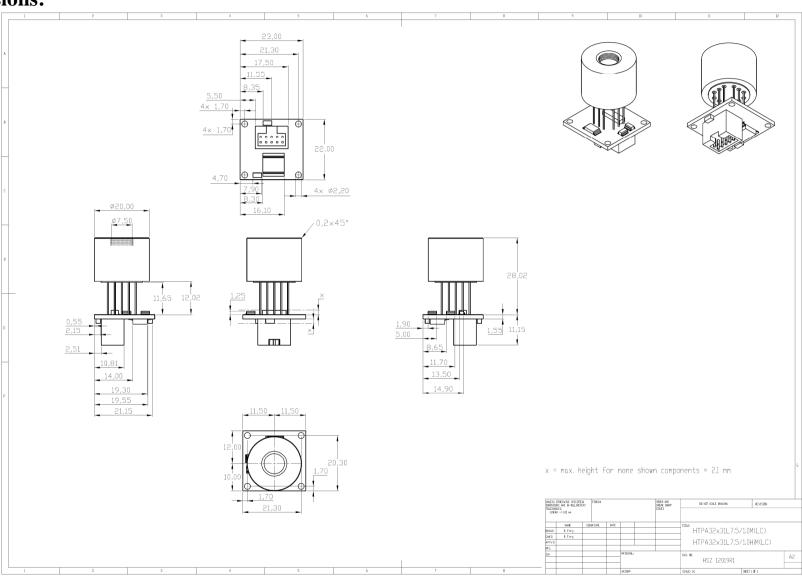

**HEIMANN Sensor GmbH**Grenzstr. 22
D-01109 Dresden / Germany

Contact / Customer Support Phone 49 (0) 6123 60 50 30 Fax 49 (0) 6123 60 50 39 Internet