
Rev.1: 2013.12.18 Fg



The HTPA32x31L_/_M(UDP) is a fully calibrated, low cost thermopile array module, with fully digital UDP interface. The module delivers an electrical offset and ambient temperature compensated output stream, which can be already used for image processing, pattern recognition and presence detection purposes. Object temperatures can be easily obtained by this data stream.


Order Code Example

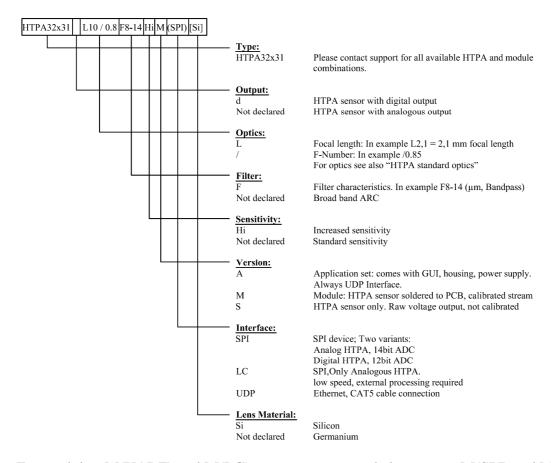

For modules, M(UART) and M(LC) are not recommended anymore. M(SPI) and M(UDP) offer a wider input voltage range, better ADC resolution and a wider measurement range.

Pinout

| Pin A | Pin Assignment HTPA32x31M(UDP) | | | | | | | | | | |
|-------|--------------------------------|----------------------------|----------------|--|--|--|--|--|--|--|--|
| Pin | Name | Description | Туре | | | | | | | | |
| 1 | TPOut+ | Differential Signal Output | Digital Output | | | | | | | | |
| 2 | VDD | Positive supply voltage | Power | | | | | | | | |
| 3 | TPOut- | Differential Signal Output | Digital Output | | | | | | | | |
| 4 | TPIn+ | Differential Signal Input | Digital Input | | | | | | | | |
| 5 | | not connected | | | | | | | | | |
| 6 | TPIn- | Differential Signal Input | Digital Input | | | | | | | | |
| 7 | | not connected | | | | | | | | | |
| 8 | VSS | Ground reference | Power | | | | | | | | |

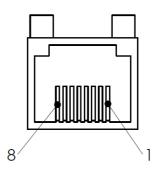

HEIMANN Sensor GmbHMaria-Reiche-Str. 1
D-01109 Dresden / Germany

Contact / Customer Support Phone 49 (0) 6123 60 50 30 Fax 49 (0) 6123 60 50 39 Internet

www.heimannsensor.com mail: info@heimannsensor.com


Rev.1: 2013.12.18 Fg



Ethernet-Interface: Protocol Specifications:


Protocol type: UDP All communication on Port: 30444

Power connection at Ethernet device:

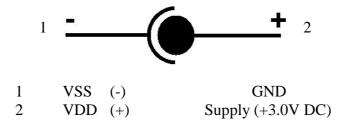

Power Supply: 2.9-3.3 VDC, 300mA

HTPA32x31L4.7/0.9HiM(UDP) Optical Orientation of Pixels:

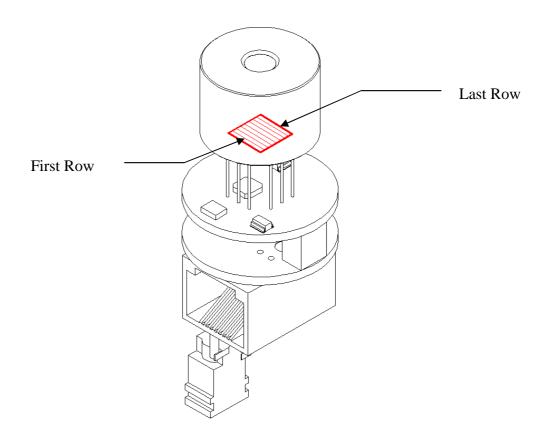


Rev.1: 2013.12.18 Fg



Communication and Timings:

Proposed flow chart of communication. (Master is referred as µC, Slave as HTPA module)

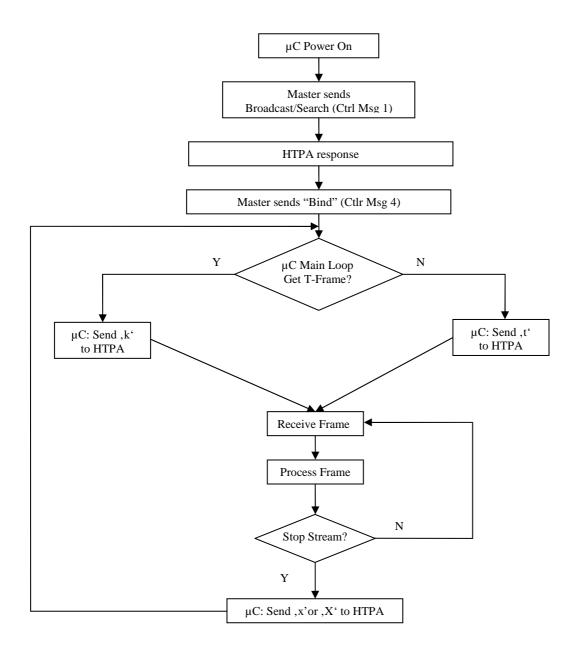

Rev.1: 2013.12.18 Fg



Communication:

| | | | | | | Con | nmunication | via Termina | l / UDP | | | | | |
|--------------|---------|-----------|------------------------|-------------------------|---|-----------------------|-----------------|-----------------------|-------------------|---------------|---------------------------------------|-----------------|----------------------------|--|
| Sent Char | HTPA8x8 | HTPA16x16 | HTPA32x31 HTPA64x62 | Result/Received message | | | | | | | | | | |
| 'a' | X | X | X | | the operating f | | | | | | | | | |
| 'A' | X | X | X | | the operating fr | <u> </u> | | | | | | | | |
| 'b' 'C' | X | X | X | | /DD (reference | | | \ | CII :64: | IIADT 1.: | · · · · · · · · · · · · · · · · · · · | LIDD | | |
| 'c' | X | X | X | | ngle voltage fr | | | _ | | | - | | | |
| 'd'/'D' | X | X | Λ | Toggle PC | ngle voltage fr | ame. Use AL | C of μC. Out | put via ASC | ii ii seiii via C | AK 1, billar | y 11 sent via c | DP. | | |
| 'f' | X | X | X | Toggle Re | | | | | | | | | | |
| F | X | X | | | enting point is | at start of A | D-range, only | positive sign | nals convertal | ole | | | | |
| 'G' | X | X | | U i | erating point is | | | | | | table | | | |
| 'g' | X | X | | | erating point is | | | | | | | | | |
| 'h' | X | X | X | | nary EEDATA | | <u> </u> | | | | | | | |
| 'i' | | | X | Read sing | le voltage fram | e. Output in | ASCII format | . Serial order | : Pixeldata[K | *10], el. Off | sets, Ambien | t Temperatu | ire | |
| Ί' | | | X | Read sing | le temperature | frame. Outpu | t in ASCII fo | rmat. Serial o | order: Pixelda | ta[K*10], el. | Offsets, Am | bient Temp | erature | |
| 'J' | X | X | X | Toggle Ar | npli fication | | | | | | | | | |
| 'k' | X | X | X | Read sing | le temperature : | frame. Outpu | ıt in binary fo | rmat. | | | | | | |
| 'K' | X | X | X | | nous binary ter a complete cyc | - | | ADC)[K*10] | | | | | | |
| | | | | НТ | HTPA 8x8 and HTPA 16x16: Pixel0,Pixel1,PixelX, el.Offset0, el.Offset1,, el.OffsetY,PTAT0,PTAT1,,PTATZ HTPA32x31: see Table2. For a detailed Description of the serial order see Table2. | | | | | | | | | |
| | | | | | =7; Z=7 et has exactly 2). The first 4 da | X=6 bytes: first t | set0el.Offset | 3 after the la | | ge PixelX tr | ansmit additi | | Temperature in Tent VDD | |
| | | | | Deterent | Bit 15 | Bit14 | Bit13 | Bit12 | Bit 11 | Bit10 | ,. T | B it1 | Bit 0 | |
| | | | | Dataset elOff0 | MSB VDD | DIT14 | БШЭ | Bit12 VDD | MSB elOff0 | BILLO | | DIU | LSB elOff0 | |
| | | | | elOffl | Bit 11 VDD | | | Bit8 VDD | MSB dOff1 | | | | LSB elOff1 | |
| | | | | elOff2 | Bit 7 VDD | | | Bit4 VDD | MSB elOff2 | | | | LSB elOff2 | |
| | | | | elOff3 | Bit 3 VDD | | | LSB VDD | MSB elOff3 | | | | LSB elOff3 | |
| | | | | The Senso | or temperature i | s available ir | the datasets | after <i>el.Offse</i> | t3 : | - | • | • | • | |
| | | | | Dataset | Bit 15 | Bit14 | Bit13 | Bit12 | Bit 11 | Bit10 | | B it1 | Bit 0 | |
| | | | | elOff3+1 | MSB TAmb | | | Bit12 TAmb | MSB elOff3+1 | | | | LSB elOff3+1 | |
| | | | | elOff3+2 | Bit 11 TAmb | | | Bit8 TAmb | MSB elOff3+2 | | | ļ | LSB elOff3+2 | |
| | | | | elOff3+3 | Bit 7 TAmb | | | Bit4 TAmb | MSB elOff3+3 | | | ļ | LSB elOff3+3 | |
| | | | | elOff3+4 | 10fB+4 Bit 3 TAmb LSB TAmb MSB elOff3+4 LSB elOff3+4 | | | | | | | | | |
| | Ļ | Ļ | | elOff3+5 | | | 0 (| | 0 MSB elOff3+5 | | <u></u> | | LSB elOff3+5 | |
| '1' | X | X | X | | ent Temperatur | | | | | | | .1 22.6 | TITED A 22 CT | |
| 'm' | X | X | X | | age of µC-Buff | | | | | 1 HTPA16x1 | 16; Stack dep | th = 32 for 3 | HTPA32x31) | |
| 'M' | X | X | X | | rent and calibr | | | | 0 | ITD 4 00 "1 | "_IITD 4 1 C | 16 11211 1177 | ED A 22-21 | |
| | | | | | eries response | | | | | | | | PA32X31 | |
| | | | | | Firmware v.X.XX written by B.Forg; Heimann Sensor GmbH; YYYY-MM-DD" Version information. I am running on XXXX.X kHz" Actual MCLK-setting in kHz | | | | | | | | | |
| | | | | | | | | - | | | | | | |
| | | | | - | cation is X'' A | | • | _ | | _ | | , | | |
| | | | | | D: X IP: Y Dev | | . • | | | | | | 65505 | |
| | | | | | ID of the device | | | | | | | | .65535 | |
| | | | | "PIXCvs" | TAX, BFL3 X | , F8_14 X , | THVSTA X | GNORE_EI | LOFF X ELO | JFF32 X SE | SYYFCX | EXPZ" | | |

Table 1a: Control Characters

Rev.1: 2013.12.18 Fg



| | Communication via Terminal / UDP | | | | | | | | | | | | | |
|--------------|----------------------------------|-----------|------------------------|-------------|---|----------------|---------------|--------------|--|------------|--------------|-------------|-------------|--|
| Sent Char | HTPA8x8 | HTPA16x16 | HTPA32x31 HTPA64x62 | | Result/Received message | | | | | | | | | |
| 'o' | | X | X | Use externa | l reference vo | oltages | | | | | | | | |
| 'O' | | X | X | Use interna | l reference vo | ltages | | | | | | | | |
| 'q'/'Q' | X | X | X | Allow Char | nges (required | for Calibrat | ion) | | | | | | | |
| 't' | X | X | X | Continuous | binary voltag | ge data of the | μC-ADC is | transmitted. | | | | | | |
| | | | | Output of a | complete cyc | le in this ord | er: | | | | | | | |
| | | | | HTI | PA 8x8 and H | | | HTPA32x3 | l.Offset0, el.C 31: see Table2 of the serial | 2. | | AT0,PTAT1,. | ,PTATZ | |
| | | | | 16x16 Arra | *** | | Array: | 2 escription | oj ure ser ur | 0.00.000 | | | | |
| | | | | X=255; Y= | - | | 53; Y=4; Z=4 | ı | | | | | | |
| | | | | | One dataset has exactly 2 bytes: first the low-Byte is send, then the high-byte. Each Dataset contains the ADC-Data in digits and The first 4 datasets <i>el.Offset0el.Offset3</i> after the last Pixel voltage <i>PixelX</i> transmit additional the current VDD in the MSB's: | | | | | | | | | |
| | | | | Dataset | Bit 15 | Bit14 | Bit13 | Bit12 | Bit 11 | Bit10 | 1 | B it1 | Bit 0 | |
| | | | | elOff0 | MSB VDD | Diti | Ditto | Bit12 VDD | MSB elOff0 | Bitto | | Ditt | LSB elOff0 | |
| | | | | elOffl | Bit 11 VDD | | | Bit8 VDD | MSB elOff1 | | | | LSB elOff1 | |
| | | | | elOff2 | Bit 7 VDD | | | Bit4 VDD | MSB elOff2 | | | | LSB elOff2 | |
| | | | | elOff3 | Bit 3 VDD | | | LSB VDD | MSB elOff3 | | | | LSB elOff3 | |
| 'T' | X | X | | Continuous | binary data o | f the ASIC-A | ADC is transi | nitted. | | | - | | | |
| | | | | | er is equal to ' | | | | | | | | | |
| 'u' | X | X | | | binary data o | | ADC is transi | nitted. PTAT | -Voltages are | sampled w | ith the uC-A | DC. | | |
| | L_ | | | | er is equal to ' | | | | | | | | | |
| 'U' | X | X | | | gle frame. Us | | SIC. Output v | ia ASCII. PI | ΓAT-Voltages | are sample | d with the u | C-ADC. | | |
| 'v' | X | X | X | | P (Only Ether | , | | | | | | | | |
| 'V' | X | X | X | | its control me | | non-Ethernet | devices) | | | | | | |
| 'w' | X | X | X | | oration-consta | | | . 11 | | | | | | |
| 'W' | X | X | X | | Calibration. ATTENTION! Old Dataset cannot be restored! Stops Stream without prompt. | | | | | | | | | |
| 'x' 'X' | X | X | X | | • | • | , | | | | | | | |
| 'v' | X | X | X | | m by sending | | | | | | | | | |
| 'Y' | X | X | X | | ASIC-Supply (ASIC-Supply (| | | | | | | | | |
| ĭ | Λ | Λ | Λ | SWITCH ON A | sic-supply (| J V) | | | | | | | | |

Table 1b: Control Characters (continuation)

Please be aware, that the source and destination port has to be 30444

Rev.1: 2013.12.18 Fg



Serial order of data in stream:

| | HTPA32x31 Temperature Mode |
|---------|-------------------------------------|
| Dataset | Value |
| 0 | Temperature of Pixel0 in K*10 |
| 1 | Temperature of Pixel 16 in K*10 |
| 2 | Temperature of Pixel1 in K*10 |
| 3 | Temperature of Pixel 17 in K*10 |
| 30 | Temperature of Pixel 15 in K*10 |
| | Temperature of Pixel 31 in K*10 |
| | Temperature of Pixel32 in K*10 |
| | Temperature of Pixel 48 in K*10 |
| | ' |
| | Temperature of Pixel 991 in K*10 |
| | elOff0 in digits |
| | elOff16 in digits |
| | elOff1 in digits |
| | elOff17 in digits |
| | |
| 1022 | elOff15 in digits |
| | elOff31 in digits |
| | least significant 12 bits of VDD |
| 1025 | most significant 4 bits of VDD |
| 1026 | least significant 12 bits of TAmb |
| 1027 | most significant 4 bits of TAmb |
| 1028 | no value, ignore |
| 1029 | no value, ignore |
| | |
| 1039 | no value, ignore |
| 1040 | PTAT0 in digits |
| 1041 | no value, ignore |
| 1042 | PTAT1 in digits |
| | |
| | no value, ignore |
| | PTAT7 in digits |
| 1055 | no value, ignore |

| | HTPA32x31 Voltage Mode |
|---------|---|
| Dataset | Value |
| 0 | absolute Voltage of Pixel0 in digits |
| 1 | absolute Voltage of Pixel16 in digits |
| 2 | absolute Voltage of Pixel1 in digits |
| 3 | absolute Voltage of Pixel17 in digits |
| | absolute Voltage of PixeI15 in digits |
| | absolute Voltage of Pixel31 in digits |
| | absolute Voltage of Pixel31 in digits |
| | o o |
| | absolute Voltage of Pixel48 in digits |
| | |
| | absolute Voltage of Pixel991 in digits elOff0 in digits |
| | |
| | elOff16 in digits |
| | elOff1 in digits |
| | elOff17 in digits |
| 4022 | |
| | elOff15 in digits |
| | elOff31 in digits |
| | least significant 12 bits of VDD |
| | most significant 4 bits of VDD |
| | no value, ignore |
| | no value, ignore |
| | no value, ignore |
| 1029 | no value, ignore |
| | |
| | no value, ignore |
| | PTAT0 in digits |
| | no value, ignore |
| 1042 | PTAT1 in digits |
| 4050 | |
| | no value, ignore |
| | PTAT7 in digits |
| 1055 | no value, ignore |

Table 2: Serial order of data in stream

Each dataset consists of a 16 bit value. If a frame consists out of more than one packet, packets are appended.

Rev.1: 2013.12.18 Fg



Pixel Map:

| 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 |
|-----|-------|-----|-----|-------|-----|------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-------|------|-----|-----|
| 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 | 61 | 62 | 63 |
| 64 | 65 | 66 | 67 | 68 | 69 | 70 | 71 | 72 | 73 | 74 | 75 | 76 | 77 | 78 | 79 | 80 | 81 | 82 | 83 | 84 | 85 | 86 | 87 | 88 | 89 | 90 | 91 | 92 | 93 | 94 | 95 |
| 96 | 97 | 98 | 99 | 100 | 101 | 102 | 103 | 104 | 105 | 106 | 107 | 108 | | | 111 | 112 | 113 | 114 | 115 | 116 | 117 | 118 | 119 | 120 | 121 | 122 | 123 | 124 | 125 | 126 | 127 |
| 128 | 129 | 130 | 131 | 132 | 133 | 134 | 135 | 136 | 137 | 138 | 139 | 140 | 141 | 142 | 143 | 144 | 145 | 146 | 147 | 148 | 149 | 150 | 151 | 152 | 153 | 154 | 155 | 156 | 157 | 158 | 159 |
| 160 | 161 | 162 | 163 | 164 | 165 | 166 | 167 | 168 | 169 | 170 | 171 | 172 | 173 | 174 | 175 | 176 | 177 | 178 | 179 | 180 | 181 | 182 | 183 | 184 | 185 | 186 | 187 | 188 | 189 | 190 | 191 |
| 192 | 193 | 194 | 195 | 196 | 197 | 198 | 199 | 200 | 201 | 202 | 203 | 204 | 205 | 206 | 207 | 208 | 209 | 210 | 211 | 212 | 213 | 214 | 215 | 216 | 217 | 218 | 219 | 220 | 221 | 222 | 223 |
| 224 | 225 | 226 | 227 | 228 | 229 | 230 | 231 | 232 | 233 | 234 | 235 | 236 | 237 | 238 | 239 | 240 | 241 | 242 | 243 | 244 | 245 | 246 | 247 | 248 | 249 | 250 | 251 | 252 | 253 | 254 | 255 |
| 256 | 257 | 258 | 259 | 260 | 261 | 262 | 263 | 264 | 265 | 266 | 267 | 268 | 269 | 270 | 271 | 272 | 273 | 274 | 275 | 276 | 277 | 278 | 279 | 280 | 281 | 282 | 283 | 284 | 285 | 286 | 287 |
| 288 | 289 | 290 | 291 | 292 | 293 | 294 | 295 | 296 | 297 | 298 | 299 | 300 | 301 | 302 | 303 | 304 | 305 | 306 | 307 | 308 | 309 | 310 | 311 | 312 | 313 | 314 | 315 | 316 | 317 | 318 | 319 |
| 320 | 321 | 322 | 323 | 324 | 325 | 326 | 327 | 328 | 329 | 330 | 331 | 332 | 333 | 334 | 335 | 336 | 337 | 338 | 339 | 340 | 341 | 342 | 343 | 344 | 345 | 346 | 347 | 348 | 349 | 350 | 351 |
| 352 | 353 | 354 | 355 | 356 | 357 | 358 | 359 | 360 | 361 | 362 | 363 | 364 | 365 | 366 | 367 | 368 | 369 | 370 | 371 | 372 | 373 | 374 | 375 | 376 | 377 | 378 | 379 | 380 | 381 | 382 | 383 |
| 384 | 385 | 386 | 387 | 388 | | | 391 | 392 | | 394 | | | | 398 | | | | _ | | 404 | _ | 406 | | 408 | 409 | 410 | 411 | 412 | 413 | 414 | 415 |
| 416 | 417 | 418 | 419 | 420 | 421 | 422 | 423 | 424 | 425 | 426 | 427 | 428 | 429 | 430 | 431 | 432 | 433 | 434 | 435 | 436 | 437 | 438 | 439 | 440 | 441 | 442 | 443 | 444 | 445 | 446 | 447 |
| 448 | 449 | 450 | 451 | 452 | 453 | 454 | 455 | 456 | | 458 | | | | | | | | _ | _ | | | 470 | | | | 474 | | 476 | 477 | 478 | 479 |
| 480 | 481 | 482 | | 484 | | 486 | | | | 490 | | | | | | | | _ | | | | 502 | | 504 | | | | | 0.07 | | 511 |
| 512 | 513 | 514 | 515 | 516 | 517 | 518 | 519 | 520 | 521 | 522 | 523 | 524 | 525 | 526 | 527 | 528 | 529 | 530 | 531 | 532 | 533 | 534 | 535 | 536 | 537 | 538 | 539 | 540 | 541 | 542 | 543 |
| 544 | 545 | 546 | 547 | 548 | 549 | | | 552 | 553 | 554 | 555 | 556 | 557 | 558 | 559 | 560 | 561 | 562 | 563 | 564 | 565 | 566 | 567 | 568 | 569 | 570 | 571 | 572 | 573 | 574 | 575 |
| 576 | 577 | 578 | 579 | 580 | 581 | | | 584 | 585 | 586 | | 588 | | | 591 | | | 594 | | | | 598 | | 600 | | | 603 | | | 000 | 607 |
| 608 | 609 | 610 | 611 | 612 | - | | | 616 | | 618 | | | | 622 | | | | | | 628 | | | | 632 | 633 | 634 | 635 | 636 | 637 | 638 | 639 |
| 640 | 641 | 642 | 643 | | | | | 648 | | 650 | | | | 654 | | | | | | 660 | | | | | | 666 | | 0.00 | 007 | 0.0 | 671 |
| 672 | | _ | | | | | | 680 | | | | | | | | | | - | | | | 694 | | 696 | | | | | | 702 | 703 |
| 704 | 705 | 706 | | 708 | | | _ | _ | | _ | | | | 718 | | | | | 723 | | 725 | 726 | | 728 | | 730 | 731 | | | 734 | 735 |
| 736 | 737 | 738 | 739 | 740 | 741 | | 743 | | 745 | 746 | | 748 | | | | 752 | 753 | | 755 | | | | | 760 | | 762 | 763 | 764 | | | 767 |
| 768 | 769 | 770 | 771 | 772 | 773 | 774 | 775 | | 777 | 778 | | | | 782 | | | | | | 788 | | | - | 792 | | 794 | 795 | 796 | 797 | 798 | 799 |
| 800 | 801 | 802 | 803 | | | 806 | | | - | 810 | _ | _ | | 814 | | | | _ | - | | _ | 822 | 0-0 | ·-· | 825 | 826 | 827 | 0 - 0 | V-/ | 000 | 831 |
| 832 | 833 | 834 | 835 | | 837 | 000 | | 0.0 | | 842 | | | | | 847 | | | | | 852 | | | | 856 | 857 | 858 | 859 | 0.00 | 001 | | 863 |
| 864 | 000 | 000 | 867 | 000 | | | | | | | | | _ | | _ | | | | _ | | | 886 | _ | 888 | | | | | | | 895 |
| 896 | | 898 | 899 | , , , | | / 0- | | 904 | - | 906 | | | | | _ | | | _ | | _ | _ | 918 | - | 920 | / | / | / | / | | / | 927 |
| 928 | / = / | 930 | , | | | | | 936 | | | | | | | | | | | | | | 950 | | 952 | | 954 | | | | | 959 |
| 960 | 961 | 962 | 963 | 964 | 965 | 966 | 967 | 968 | 969 | 970 | 971 | 972 | 973 | 974 | 975 | 976 | 977 | 978 | 979 | 980 | 981 | 982 | 983 | 984 | 985 | 986 | 987 | 988 | 989 | 990 | 991 |

Table 3: Pixelmap

Packets (UDP, only Ethernet device):

| Number of packets | Packet size [byte] | HTPA type | Comments |
|-------------------|--------------------|-----------|-----------------------|
| 1 | 144 | HTPA8x8 | - |
| 1 | 544 | HTPA16x16 | - |
| 2 | 1058+1054 | HTPA32x31 | see below for details |
| 8 | 1101+621 | HTPA64x62 | see below for details |

| Packet details for HTPA32x31 | | | | | | | | | |
|------------------------------|-------------|----------------------------------|--|--|--|--|--|--|--|
| Packet No. | Packet size | Packet contains | | | | | | | |
| 1 | 1058 | Data of Pixel0 - Pixel528 | | | | | | | |
| 2 | 1054 | Data of Pixel529 to end of frame | | | | | | | |

Each dataset (except of packet index) consists out of a 16 bit value. For serial order of the datasets refer to section "serial order in Frame".

Rev.1: 2013.12.18 Fg



Control Messages:

In the set of control messages, expressions in angled braces have to be substituted by following strings:

[**IP**] insert IP in ASCII format, i.e.: "192.168.240.122"

[MACID] insert MAC ID in ASCII format and hexadecimal, i.e.: "00.1A.22.33.44.55"

[AT] insert index of array types in ASCII format

Array type Index HTPA 8x8 "0" HTPA 16x16 "1" HTPA 32x31 "3" HTPA 64x62 "5"

[MCLK] insert Frequency of MCLK in ASCII format and kHz, i.e.: "1050.1"

[AMP] insert state of amplification in ASCII format:

State String
Low "low"
High "high"

[MSK] insert subnet mask in ASCII format, i.e.: "255.255.255.000"

[DEVID] insert 5 digit device ID in ASCII format, i.e. "00197" Range: 00000... 65535

Set of control messages:

Message1: "Calling HTPA series devices" (only Ethernet device)

Conditions: Can be sent as Broadcast, or if device already known as normal packet.

Answer: "HTPA series responsed! I am Arraytype [AT]"

Firmware version, date and author information.

"I am running on [MCLK] kHz"
"Amplification is [AMP]\r\n"
"MAC-ID: [MACID] IP: [IP]\r\n"

A second packet with calibration depending information is send.

Message2: "x Release HTPA series device" (only Ethernet device)

Result: Device disables hardware IP filter. All packets except ARP's, DHCP requests,

Broadcasts, Message1, Message3 and Message4 are discarded.

Answer: "HW-Filter released\r\n"

Message3: "HTPA device IP change request to [IP].[MSK]." (only Ethernet device)

Result: The device changes the IP and the subnet mask to the given value and writes it

to EEPROM. The IP becomes the default IP, therefore the device will use it at

the next reset, if no DHCP is found.

Answer: "Device changed IP to [IP]. and Subnet to [MSK].\r\n"

Message4: "Bind HTPA series device" (only Ethernet device)

Result: Device enables hardware IP filter. Only packets from sender IP, ARP's, DHCP

requests and Broadcasts are accepted. Device accepts now the control

characters listed in Table 1.

Answer: "HW Filter is [**IP**] MAC [**MACID**]\n\r""

Insert in the above string the IP and MAC-ID of the Sender from Message4.

HEIMANN Sensor GmbH Contact / Customer Support Internet

Maria-Reiche-Str. 1 Phone 49 (0) 6123 60 50 30 <u>www.heimannsensor.com</u>
D-01109 Dresden / Germany Fax 49 (0) 6123 60 50 39 <u>mail: info@heimannsensor.com</u>

Rev.1: 2013.12.18 Fg



Control Messages [continued]:

Message5: "Set EEPROM data"

Conditions: Only possible if Message 4 already successful sent.

ATTENTION! Calibration data is overwritten!!!

Result: Writes the next received packets into EEPROM, if packet size is equal to 1024

bytes. Device writes to EEPROM, until EEPROM is completely filled. EEPROM size depends on Device type: HTPA8x8, HTPA16x16 and

HTPA32x31: 16384 byte; HTPA64x62: 65536 byte.

Answer: "Write was successful.\n\r"

Message6: "Set DeviceID to [DEVID]"

Result: The given Device ID [**DEVID**] is written to EEPROM. This ID is shown on


receive of 'M'. The eDevice ID can be used for customer specific purposes.

Answer: "DeviceID changed to [**DEVID**]\r\n"

$\begin{array}{l} \textbf{Specification for HTPA32x31L4.7/0.9HiM(UDP)} \\ \text{Rev.1: 2013.12.18 Fg} \end{array}$



Dimensions:

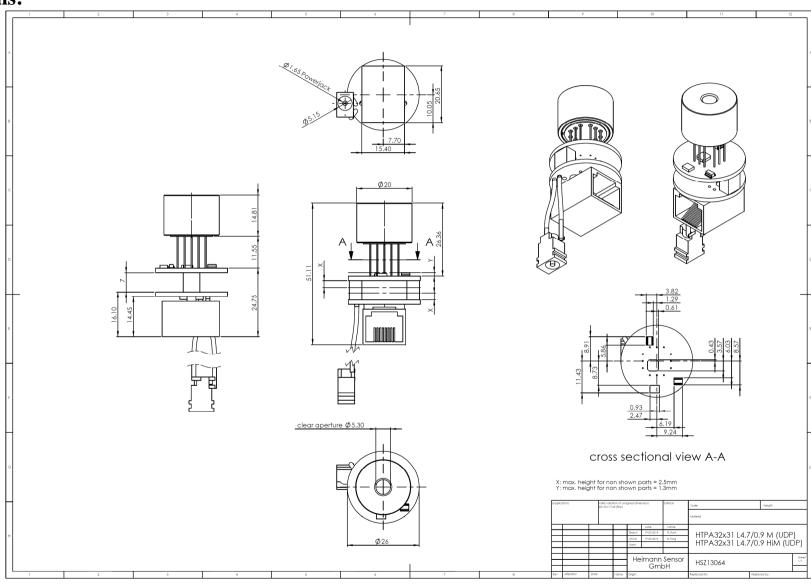

HEIMANN Sensor GmbH Maria-Reiche-Str. 1 D-01109 Dresden / Germany **Contact / Customer Support** Phone 49 (0) 6123 60 50 30 Fax 49 (0) 6123 60 50 39

Internet

www.heimannsensor.com mail: info@heimannsensor.com - 10 -